

SETUP GUIDE

Programming Procedure for 5804BDV

Procedure	On Screen Display
Enter programming mode on the 6150RF by pressing the [1] + [3] keys at the same time within 30 seconds of power up.	
Enter “3” to program the House ID. Enter “10” and then press “*” to program the House ID as 10.	
Enter “4” to program the House ID Source. Enter “0” for non-system (local) source. Then press “*.”	
Enter “8” to enroll the 5804BDV wireless key.	
Enter “1” as the device (wireless key) number. Press “1” again to enroll the serial number. Press any key on the 5804BDV. Then press the “*”key.	
Press “4” to program the loop functions on the wireless key. Enter 4 + 3 + * (Arm Stay) Enter 3 + 2 + * (Arm Away) Enter 2 + 1 + * (Disarming) Press the “*” key.	
Press “2” to enter a user code. Enter 1-2-3-4 as the user code for this key. Press the “*” key 3 times.	
Press “6” to program the receiver in the “Local” mode. Enter “0” and then press the “*” key.	
Press “7” to enable the internal transmitter module. Enter “1” and then press “*.” Press the “*” key twice to exit programming.	
Program the 5804BDV itself for a House ID of “10” using the 5804BDV instructions.	

Programming Procedure for 5834-4

Procedure	On Screen Display
Enter programming mode on the 6150RF by pressing the [1] + [3] keys at the same time within 30 seconds of power up.	
Enter “8” to enroll the 5834-4 wireless key.	
Enter “2” as the device (wireless key) number. Press “1” again to enroll the serial number. Press any key on the 5834-4. Then press the “*” key.	
Press “4” to program the loop functions on the wireless key. <ul style="list-style-type: none">• Enter 2 + 1 + * (Disarming)• Enter 3 + 2 + * (Arm Away)• Enter 4 + 3 + * (Arm Stay) Press the “*” key.	
Press “2” to enter a user code. Enter 1-2-3-4 as the user code for this key. Press the “*” key 3 times.	
Press “6” to program the receiver in the “Local” mode. Enter “0” then press the “*” key. Press the “*” key twice to exit programming.	

Honeywell

2 Corporate Center Drive, Suite 100
P.O. Box 9040, Melville, NY 11747
Copyright © 2011 Honeywell International Inc.

www.honeywell.com/security



KEYOPRFV4 4/11 Rev.A