

FAQs



5800ZBRIDGE Intelligent Energy Management

<p>How many devices can the 5800ZBRIDGE control?</p>	<p>Any combination of up to four Z-Wave® enabled thermostats or Z-Wave enabled lighting devices.</p>										
<p>What is the range of 5800ZBRIDGE?</p>	<p>Up to 100 feet (30.48 m) from 5800 Series devices and up to 70 feet (22.86 m) from a Z-Wave device.</p>										
<p>How does the end-user use the 5800ZBRIDGE?</p>	<p>By simply using their security system (Arm Away/Disarm), the 5800ZBRIDGE automates the setback of thermostats and controls lights to turn on and off.</p>										
<p>Does the 5800ZBRIDGE give status of the security system?</p>	<p>Yes, the tri-color LED indicator shows the status of the security system.</p> <table border="1" data-bbox="574 1037 1019 1255"> <thead> <tr> <th>Indication</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td>Flashing Red</td> <td>Armed Away</td> </tr> <tr> <td>Steady Red</td> <td>Armed Stay</td> </tr> <tr> <td>Solid Green</td> <td>Ready to Arm</td> </tr> <tr> <td>Flashing Orange</td> <td>Alarm/Panic</td> </tr> </tbody> </table>	Indication	Meaning	Flashing Red	Armed Away	Steady Red	Armed Stay	Solid Green	Ready to Arm	Flashing Orange	Alarm/Panic
Indication	Meaning										
Flashing Red	Armed Away										
Steady Red	Armed Stay										
Solid Green	Ready to Arm										
Flashing Orange	Alarm/Panic										
<p>How does the 5800ZBRIDGE get power?</p>	<p>It is powered by a supplied 12VDC plug-in transformer.</p>										
<p>What control panels is the ZBRIDGE compatible with?</p>	<ul style="list-style-type: none"> • All LYNX panels • VISTA panels with 5883H, 6150RF or 6160RF with TM3 										
<p>Does the 5800ZBRIDGE work with any Z-Wave enabled thermostat?</p>	<p>Yes, the preferred thermostat is the Honeywell ZSTAT, but it can work with any Z-Wave certified thermostat.</p>										
<p>Can I use more than one ZBRIDGE system?</p>	<p>Yes, you can have more than one, but the majority of installations will require only one.</p>										