

PowerG Wireless Digital Pet Immune PIR Motion Detector



Installation conditions

- 1. Keep away from heat sources
- 2. Do not expose to air drafts
- 3. Do not install outdoors
- 4. Avoid installation in direct sunshine
- 5. Do not install near high-voltage electrical lines
- 6. Do not install behind partitions
- 7. Mount on a solid stable surface

Opening the detector


Using your fingers only, press on the point marked "F" in the drawing, and separate the cover from the base. Do not use a screwdriver.




Removing the pet mask

Remove the pet mask (the plastic guard) if pet immunity is not required.

- 1. Place your thumb at the base of the pet mask
- 2. Place your fingers at the top of the pet mask
- 3. Lift the pet mask to remove

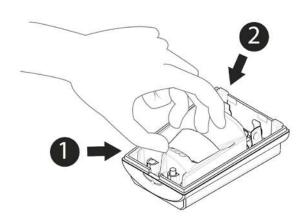


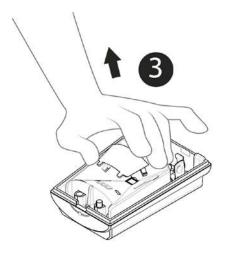

Using brackets (surface or corner)


Follow the instructions in the diagram depending on what mounting method is preferred. In corner installations, to prevent a gap on one side from the wall, first verify that the wall angel is 90 degrees.

- 1. Surface mounting
- 2. Corner mounting, use 2A or 2B
- 3. For back tamper

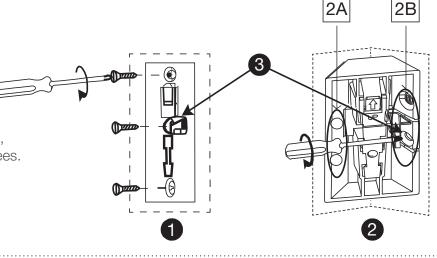

Mounting the detector on a bracket

- 1. Align the detector with the bracket
- 2. Slide the detector upward until you hear a click

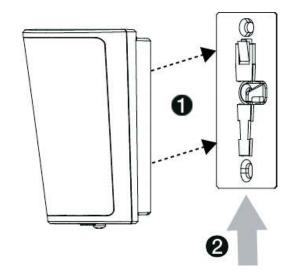

Disassembly from the bracket

- 1. Release the screw (if a screw was used for the installation)
- 2. Separate the cover from the base
- 3. Remove the battery

- 4. Press on the stopper snap to release the base from the bracket
- 5. Slide the base downward to remove

